



## ON/OFF


### DESCRIPTION OF BUTTONS

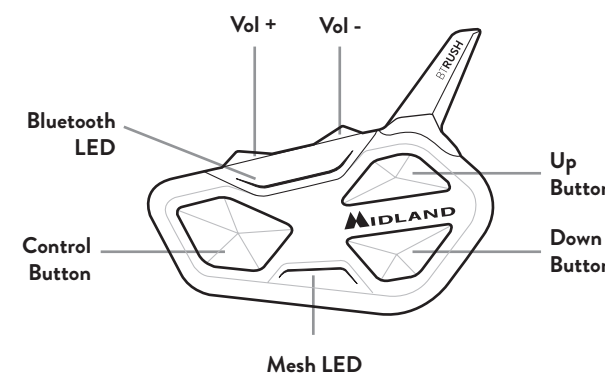

### SWITCH ON

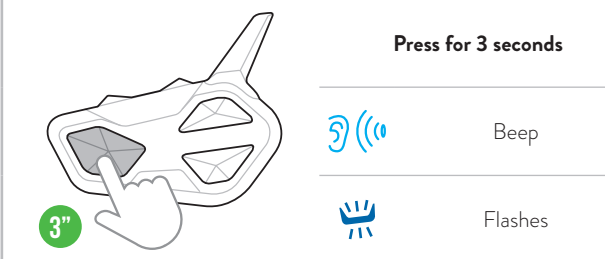


### SWITCH OFF

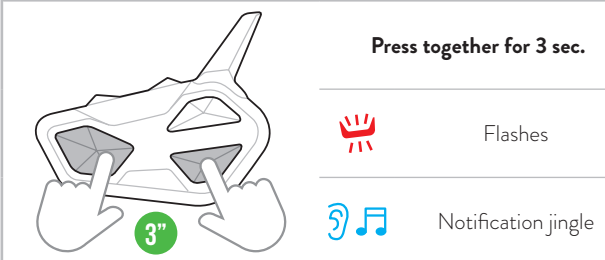


## PAIRINGS

### DESCRIPTION OF BUTTONS

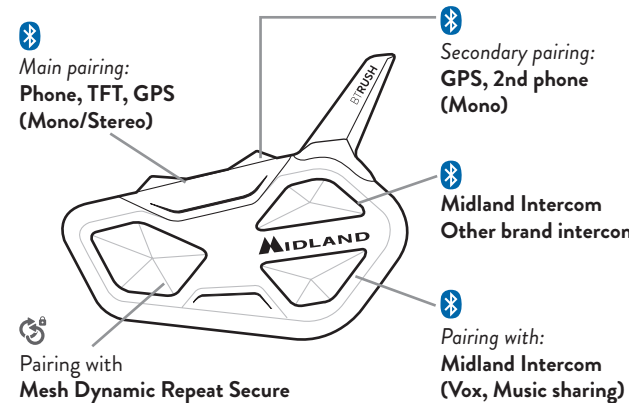


**ATTENTION:** To carry out any pairings you need to access Settings. If the Control button is pressed for fewer than 7 seconds, the device will switch itself on instead of accessing Settings. If this occurs, repeat the process.

### ACCESS SETTINGS

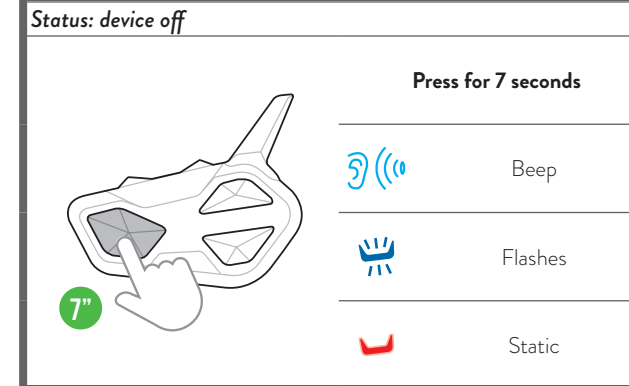


### PHONE, GPS, TFT PAIRING

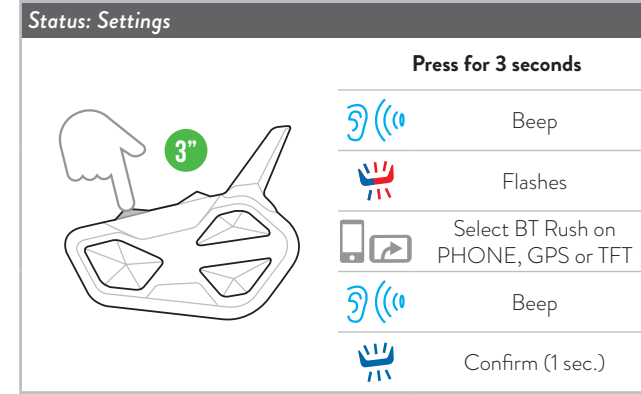


*Note: to pair a 2nd device in mono audio, repeat this procedure using Vol -.*

### MIDLAND INTERCOM PAIRING

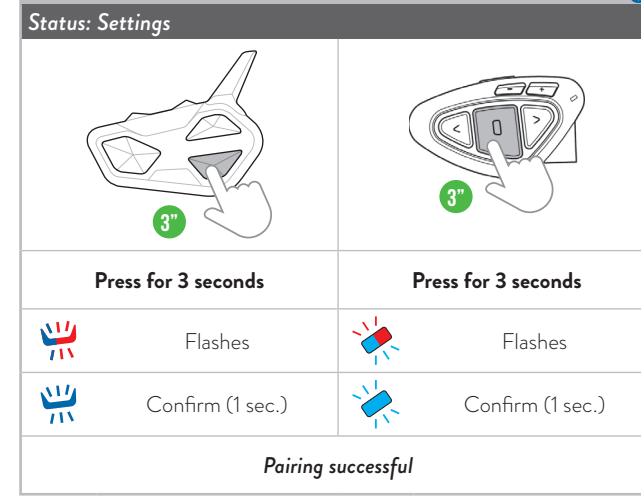


*Note: to pair another BT Pro/Pro S intercom, follow the same procedure using the Up button.*


### OTHER BRAND INTERCOM PAIRING

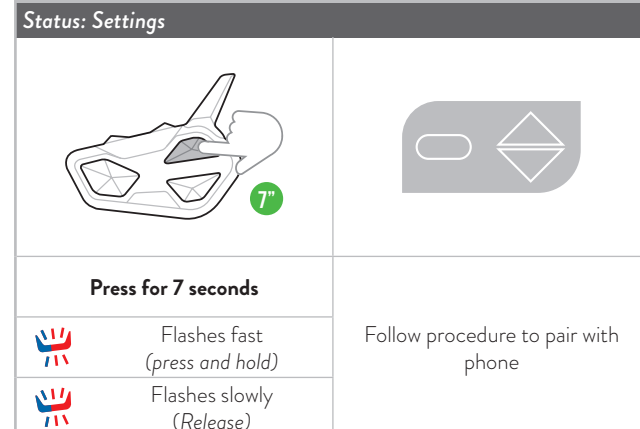


### RESET BLUETOOTH PAIRINGS

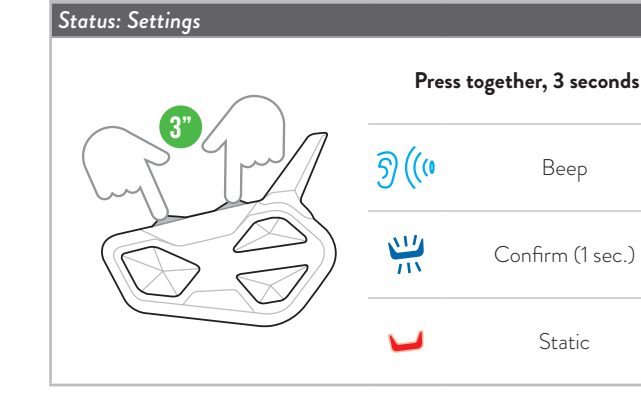

### MESH DYNAMIC REPEAT SECURE PAIRING

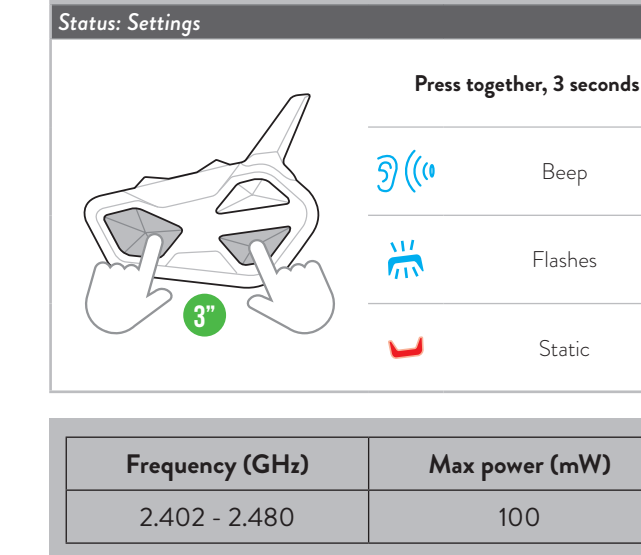

### EXIT SETTINGS MODE CANCEL PAIRING

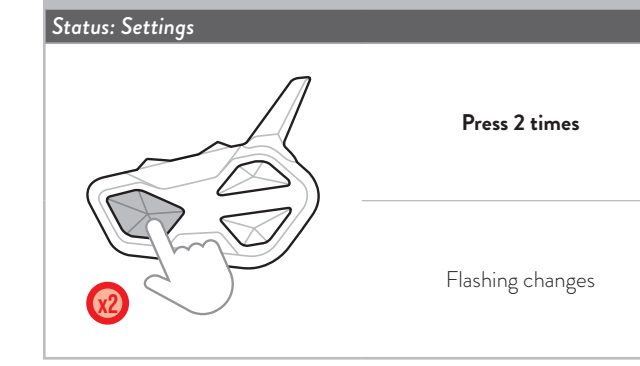

Go to our website [www.midlandeurope.com](http://www.midlandeurope.com), download the complete manual and the BT Updater software.

Customize your intercom with the **BTPRO SetApp**. Download it here:

POCKET GUIDE

## BTRUSH

MESH & BLUETOOTH CONFERENCE SYSTEM



HIGH DEFINITION SOUND BY **RCF**



ENGLISH

# OPERATING MODES

- A. Intercom Mode:** to communicate with another device via Mesh or Bluetooth.
  - B. Phone Mode:** for phone calls or for managing music.
  - C. FM Radio Mode:** to listen to, search for and store radio stations.
- Note:** Phone mode is only active when there are devices paired to the Vol+/Vol- buttons.

## CHOOSE OPERATING MODE

Status: device on

**INTERCOM MODE**

**PHONE MODE**   **FM RADIO MODE**

Press for 3 seconds to change mode or press and hold to scroll quickly

Operating mode status

**Note:** By pressing simultaneously Vol + and Vol - for 1 second, BT Rush communicates the the selected operating mode.

**Attention:** to communicate the participants must be in the same Mesh group and have different IDs.



**Conference Mesh Group:** 10 people in a 1.4 Km bubble.  
**Mesh Dynamic Repeat Group:** 6 people within 3.5 Km.  
**Mesh Dynamic Repeat Secure Group:** 6 people within 3.5 Km with Secure key assigned for private communications.

## INTERCOM MODE

The default Mesh Group is set to Dynamic Repeat. For further information consult the online manual ([www.midlandeuropa.com](http://www.midlandeuropa.com)) or the tutorials on YouTube - Midland World.

### MESH IDENTIFICATION CODE (ID) SELECTION

Status: Intercom mode

Press together, 1 time

- Voice ID
- Flashes

5 sec. to choose the personal ID (press Vol+ to increase and Vol- to decrease ID figure)

- Flashes
- Confirm ID and group

**TABLE 1 - IDS ASSIGNED TO THE VARIOUS GROUPS:**

GROUP	ID	GUEST	LED
Mesh Conference	1-10	Infinite	Flashes
Mesh Dynamic Repeat	1-6	Infinite	Flashes
Mesh Dynamic Repeat Secure	1-6	Infinite	Flashes

**Guest:** listening mode only

### FUNCTION DESCRIPTION

**Mesh ON/OFF**

### MESH COMMUNICATION ACTIVATION/DEACTIVATION

Status: Intercom mode

Press 1 time

- Jingle
- Flashes the colour of the group selected (see TABLE 1)

### TO OPEN/CLOSE INTERCOM MANUALLY

Status: Intercom mode

Press 1 time

- Beep
- Flashes

**Note:** to communicate with Rider 1 repeat the process pressing the Up button.

### TO OPEN/CLOSE INTERCOM BY VOICE

Status: in all modes

- Say "Hi"
- Jingle
- Flashes
- Silent for 40 sec. the intercom deactivates
- Beep

**Note:** Voice activation is only possible with an intercom paired with the down button.

### VOX ACTIVATION/DEACTIVATION

Status: in all modes

Press for 7 seconds

- Jingle

**SHORTCUT:** In Intercom mode pressing Control 2 times activates/deactivates the music.

### TO OPEN/CLOSE UNIVERSAL INTERCOM

Status: Intercom mode

Press for 3 seconds to activate or deactivate the Universal Intercom

- Beep
- Flashes

**Note:** to activate/deactivate the audio from a different brand device, use the voice call command (for some models it is necessary to send the voice call 2 times)

### SWITCHING FROM MESH CONFERENCE TO MESH DYNAMIC REPEAT

Status: all modes

Press together, 3 seconds

- Announcement
- Flashes the colour of the group selected (see TABLE 1) if Mesh communication is on

**SHORTCUT:** In Phone/FM Radio modes pressing Control 2 times activates/deactivates Mesh communication.

## PHONE MODE

### FUNCTION DESCRIPTION

**Play/Pause**

**(Phone on Vol+)**

- Call
- Answer
- End
- Reject
- Next song

**(Phone on Vol-)**

- Call
- Answer
- End
- Reject
- Previous track

### MAKING A CALL

Status: Phone mode

Press 1 time

- Voice Assistant Response (Google assistant, Siri)
- Give instructions
- Call

**Note:** If you have a phone paired with the Vol - button, use the Down button.

**SHORTCUT:** In Phone/FM Radio modes pressing the Down button 2 times turns the Intercom on/off.

## ANSWERING/ENDING A CALL REJECTING A CALL

Status: Phone mode

Press 1 time to answer/end a call

Press for 3 sec. to reject a call

**Note:** If you have a phone paired with the Vol - button, use the Down button.

## MUSIC

Status: Phone mode

Select Music app

Press 1 time Play/Pause

Press 1 time Next track

Press 1 time Previous track

Press for 3 sec. Start/stop sharing music with passenger (paired with Down button)

## RADIO MODE

### FUNCTION DESCRIPTION

**FM Radio On/Off**

Seek next station  
Next memory radio station

Seek previous station  
Previous memory radio station

### FM RADIO

Status: Radio mode

Press 1 time ON/OFF

Press 1 time Next station

Press for 3 seconds Next preset

Press 1 time Previous station

Press for 3 seconds Previous preset